# SIMPLE TORQON(STC-type)



#### FEATURE and BENEFIT

#### 1 Easy Operation!

Setting of target torque is easy owing to target torque setting dial.

Setting of socket and nut is easy owing to free-joint mechanism.

#### 2 High Accuracy!

Repeated tightening torque accuracy: within ±5% against required torque.

#### 3 Rotation to both directions!

Main functions such as torque control, soft start and free-joint mechanism are common to both clockwise and counter-clockwise directions.

#### 4 No Vibration!

No impacting shock during use. No vibration and low noise.

#### ⑤ Simple Design!

All necessary functions are incorporated in the wrench for no distractions during torquing.

#### 6 Automatic shut-off at preset torque!


#### TONE impact sockets can be used! Use only impact sockets.

#### **SPECIFICATIONS & LINE UP**

Model No. 115V 220V	STC3AE STC3TE	STC5AE STC5TE	STC7AE STC7TE	STC11AE STC11TE	STC12AE STC12TE	STC21AE STC21TE
Max.Currenct 115V / 220V Max.Power Consumption Frequency	13.5A / 6.5A 1100W 50-60Hz	13.5A / 6.5A 1100W 50-60Hz	13.5A / 6.5A 1100W 50-60Hz	15A / 7.5A 1400W 50-60Hz	15A / 7.5A 1400W 50-60Hz	12A / 6A 1100W 50-60Hz
Controllable Torque Range 115V(ft·Lbs) 220V(N·m)	110~220	220~370 300~500	260~520 350~700	370~810 500~1100	450~900 600~1200	750~1550 1000~2100
Repeated Accuracy Free Rotation min <sup>-1</sup> (RPM)	±5% 28	±5% 25	±5%	±5%	±5%	±5% 4
Weight (mainbody) Lb/kg Square Drive	The second secon	11.7 / 5.3 3/4"	13.7 / 6.2	19.8 / 9.0 1"	19.8 / 9.0	41.9 / 19.0 1-1/2"
Accessories	1pc. of Metal Case, Instruction Manual & Hex key wrench 1pc. of L-foot, I-bar & Q-connector					

#### **EXTERNAL DIMENSION**

EXTERIOR DIMENSION								unit : mm		
A Second of	□S	φD	W	L	L1	L2	Н	H1	H2	НЗ
STC3AE-TE	3/4"	60	85	250	280	225	250	230	110	67
STC5AE-TE	3/4"	70	85	255	285	230	255	230	110	67
STC7AE-TE	1"	75	85	270	315	240	260	270	115	64
STC11AE-TE	1"	85	105	325	370	295	285	290	130	72
STC12AE-TE	1"	85	105	325	370	295	285	290	130	72
STC21AE-TE	1-1/2"	121	105	415	485	375	305	370	180	98

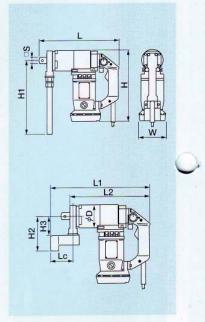

## For Construction and Industrial use. SIMPLE TORQON(SR-type)



Model No.		Torque Range	Socket	
SR31E	115V	110~ 220 ft·Lbs	/# NEW - NE	
SR32E	220V	150~ 300 N·m		
SR51E	115V	220~ 370 ft·Lbs	for MRU	
SR52E	220V	300~ 500 N·m	Series	
SR71E	115V	260~ 520 ft·Lbs		
SR72E	220V	350~ 700 N·m		
SR121E	115V	450~ 900 ft·Lbs	for HRU	
SR122E	220V	600~1200 N·m	Series	
SR171E	115V	630~1250 ft·Lbs	for VRU	
SR172E	220V	850~1700 N·m	Series	
SR182E	220V	900~1800 N·m	Octios	
SR211E	115V	750~1550 ft·Lbs	for SRU	
SR212E	220V	1000~2100 N·m	Series	


Bolt Dia.	Bar Socket Model No.				
M16 · 5/8"	MRU27T				
M20 · 3/4"	MRU32T				
M22	MRU36T	HRU36T			
7/8"	MRUB46Z	HRUB46Z			
M24 · 1"	MRU41T	HRU41T	VRU41T		
M27 •1-1/8"		HRU46T	VRU46T	SRU46T	
M30			VRU50T	SRU50T	
1-1/4"				SRUB64Z	

## **SIMPLE TORQON(STC-type)**


## How to operate

### **Tightening**

- Confirm rotating directions of socket and reaction-bar(counteracting).
- Watch distance between nut and reaction-bar prop to select L-foot or I-bar and mount it on Q-connector.
- ③ Mount Q-connector on wrench drive, then mount impact socket securely.

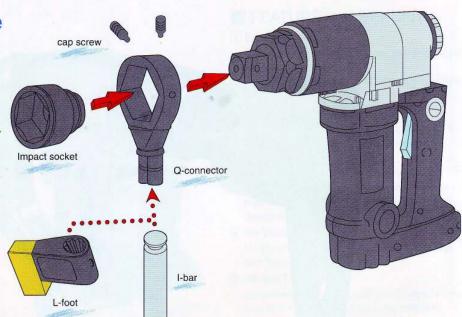

4 Install nut into socket and set reaction-bar to prop.

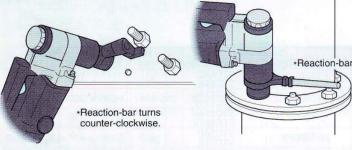

- S Adjust torque setting dial to required torque value.
- Squeeze trigger switch. When required torque has been reached, wrench stops and tightening is over.



\*Press switch intermittently till reaction-bar touches prop(support).

#### Attention

Some error is inevitable due to Torque-Coefficient that varies by different makes of bolts when setting required torque. If high precision torque setting is required, the use of dial-type torque wrench is recommended.

For queries, please contact the distributor.



#### For safe use

Read following cautions as well as cautions provided with individual tool carefully before use.

Read through exclosed instruction manual and preserve it positively so that it may referred to any time upon necessity.

Manufactured by

### TONE, MAEDA METAL INDUSTRIES, LTD.

**OSAKA JAPAN** 

 Specifications and the design are subject to change without notice.

Please look in on our homepage http://www.tonetool.co.jp mail to:overseas@tonetool.co.jp Your Distributor